



MODEL PLACING GUIDELINE

The model can be placed directly on the wall, in front of the window.
The Fixscreen Minimal will cut the wall surface and the position of the Fixscreen Minimal can be adjusted afterward.

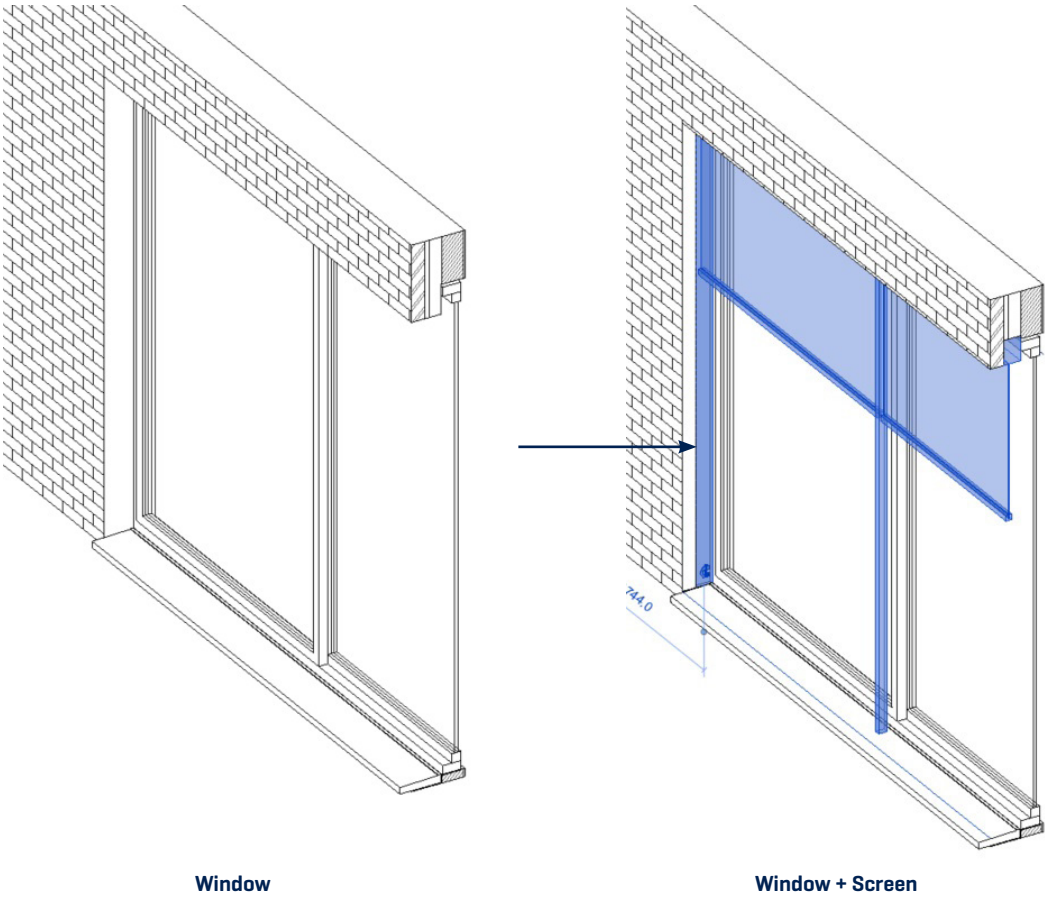

OVERVIEW PARAMETERS IN FIXSCREEN MINIMAL IM7B WITH COUPLE FREESTANDING

Properties

 Renson_Fixscreen_Minimal_IM7B_With_CF
Recessed - Front of the window - Medium - CF - Access downwards -
Fabric away from the window

Generic Models (1) Edit Type

Constraints

Construction

2 Module

3 Module

Motor_Detecto

Motor_Somfy io

Side_Guiding_M.WS

Side_Guiding_M.WS+

Side_Guiding_M.WF

Side_Guiding_M.WF+

Input_External_Wall_Depth

90.0

Graphics

Materials and Finishes

Renson_Materials_Fabric

Fiberglass_B92-51176_Jet Black_RAL 900...

Dimensions

Input_Fabric_Roller_Height

Input_Total_Height_Opening

Input_Width_Module 1

Input_Width_Module 2

Input_Width_Module 3

500.0

1750.0

1100.0

1100.0

1100.0

Select screen module

Select your motor type

Select your side guiding channel

Fill in external wall depth


Select your fabric colour

Fill in your dimensions

2 module

3 module (default)

90 mm wall depth (default)

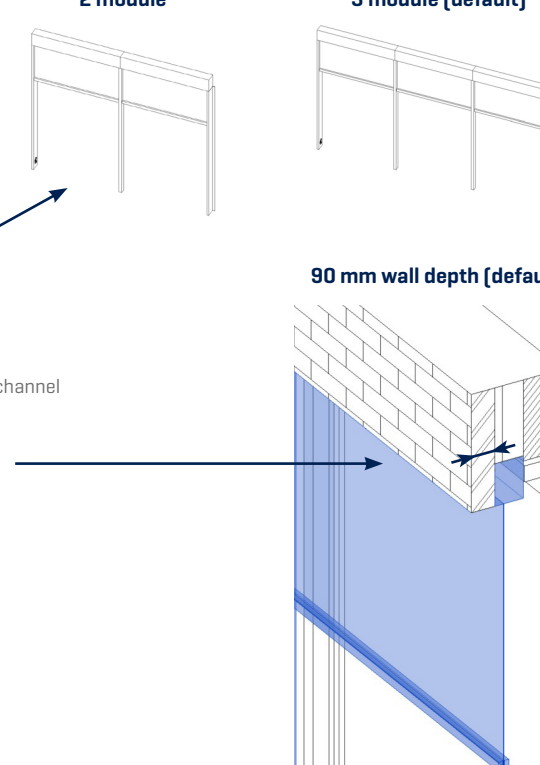

**FIXSCREEN®
MINIMAL**



Fixscreen® Minimal

Fixscreen® Minimal

