
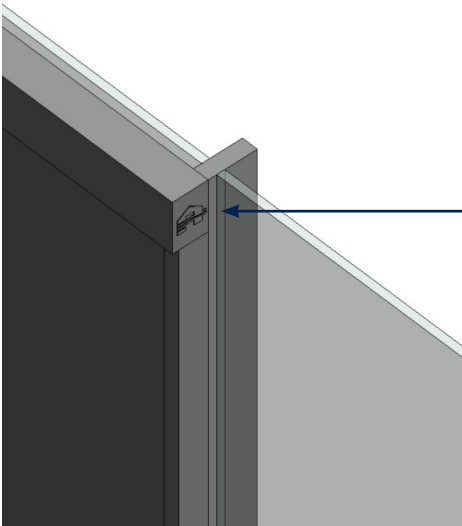
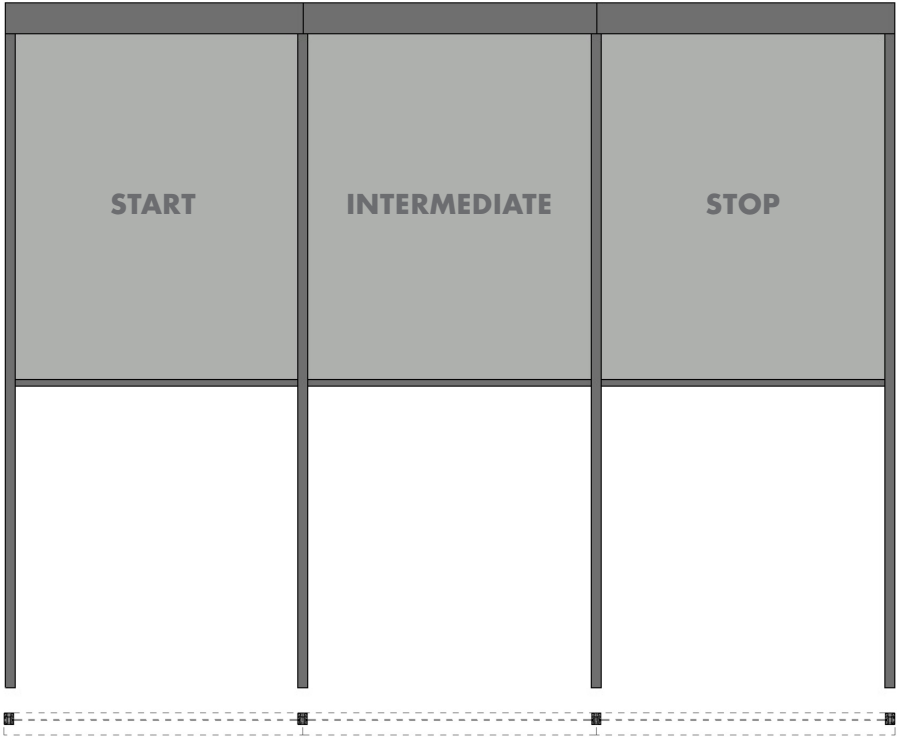


MODEL PLACING GUIDELINE

3 family models: Start, Intermediate and Stop  
Placing from left to right

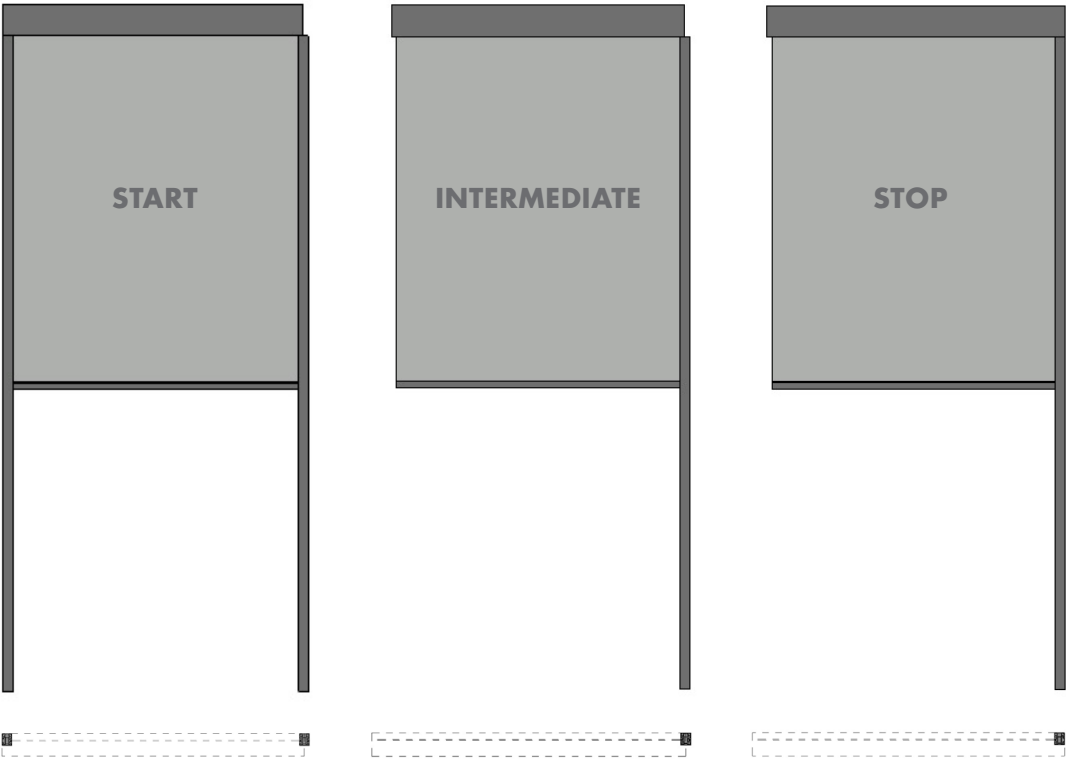

OVERVIEW PARAMETERS IN FIXSCREEN MINIMAL CW50

Properties

Renson\_Fixscreen\_Minimal\_CW50\_Start  
For curtain wall - Start element - Access downwards -  
Fabric close to the window

Generic Models (1)

Constraints

Construction

Fixscreen\_Minimal\_CW\_M\_Box 160x110

☒

Fixscreen\_Minimal\_CW\_L\_Box 180x130

☐

Motor\_Detecto

☒

Motor\_Somfy io

☐

Side\_Guiding\_Hirschmann Plug

☐

Side\_Guiding\_Standard

☒

Graphics

Section\_Detail

☐

Materials and Finishes

Material\_Fabric

Fiberglass\_B92-5117...

Dimensions

Fabric\_Roller\_Height

1800.0

Total\_Height

3500.0

Total\_Width

1525.0

Renson\_Effective\_Height

3500.0

Renson\_Effective\_Width

1525.0

Renson\_Maximum\_Width

3600.0

Renson\_Maximum\_Height

4000.0

Renson\_Minimum\_Width

670.0

Renson\_Minimum\_Height

300.0

Select Box size

Select your motor type

Select your side guiding channel

Select your fabric colour

Fill in your dimensions

Dimension constraints

Standard 50x58 (default)

Hirschmann Plug 50x90



**FIXSCREEN®  
MINIMAL**



*Fixscreen® Minimal  
Curtain Wall 50*

