

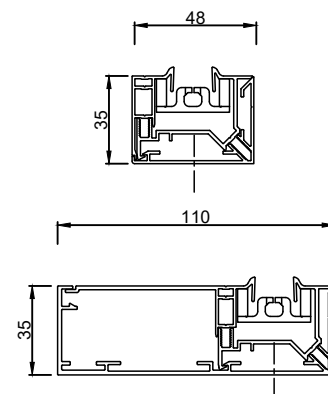
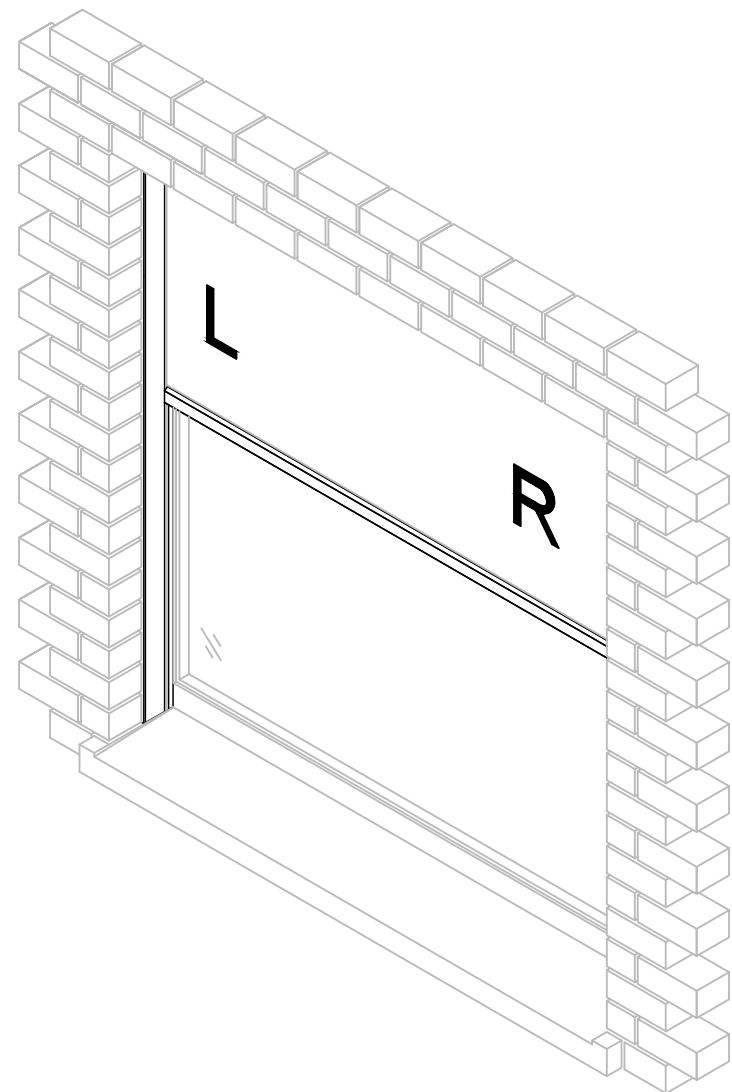


This drawing is property of NV RENSON, and may not be copied or shown to thirds without written permission.

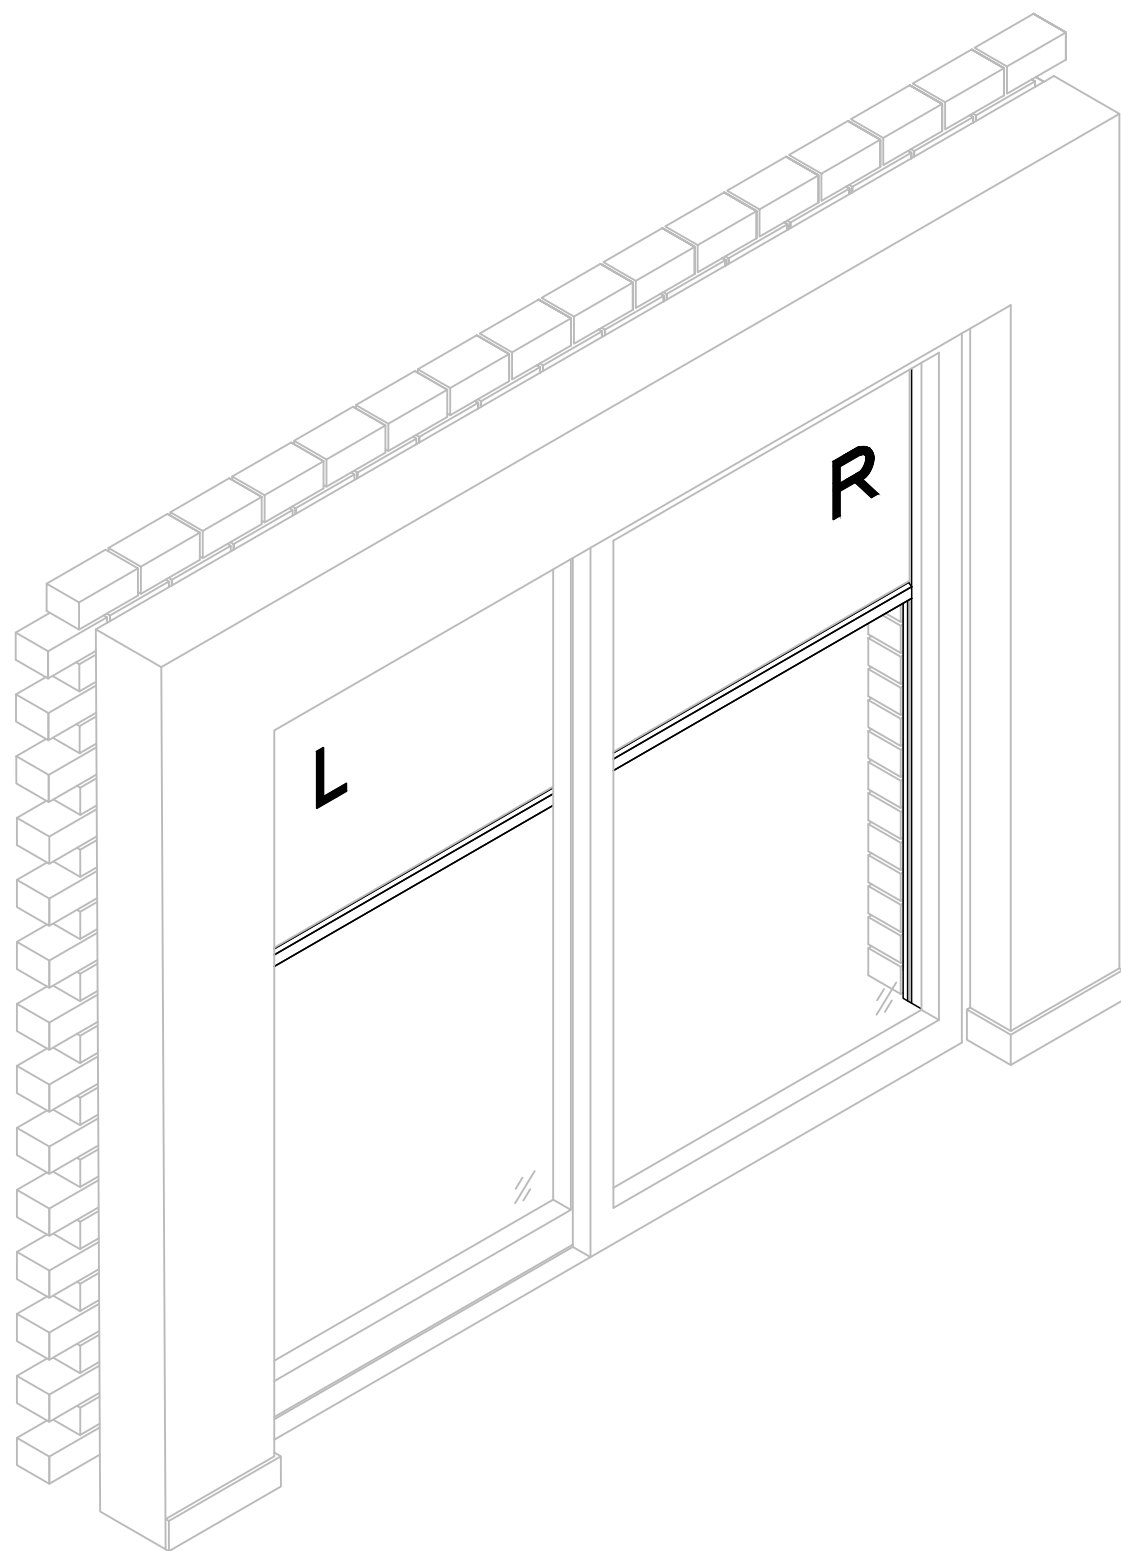

Zijgeleider 3 delen  
Coulisse 3 parties  
Side channel 3 parts  
Seitenführung 3 Teile  
Guía lateral 3 partes

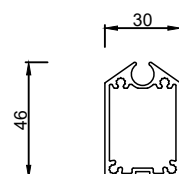

Onderlat  
Barre de charge  
Bottom rail  
Die Endschiene  
Perfil contrapeso

Montagesituatie 7B - voor/boven het raam (met omgekeerde kast en zijgeleiders)  
Montage 7B - Avant/dessus le châssis (avec caisson inversé et coulisses inversées)  
Installation method 7 - in front/above the window (with reversed box and side channels)  
Einbauweise 7B- Vor/oben auf dem rahmen (mit umgedrehter kassette und seitenführung)  
Tipo de montaje 7B - Delnate/encima la ventana (con cajón y guías laterales invertidos)



**RENSON®**  
Creating healthy spaces  
Industriezone "Flanders field"  
8790 Waregem (Belgium)  
Tel. 056/62.71.11 Fax. 056/60.28.51

Drawn by msple	Date 07/05/2020	Scale 1/3
Fixscreen® 100 SLIM		Version 1
MS7B / M7B / IM7B / EW7B / TdM7B		Page 1/1
		A3

