



This drawing is property of NV RENSON, and may not be copied or shown to thirds without written permission.


Zijaanzicht
Vue de côté
Side view
Seitenansicht
Vista lateral

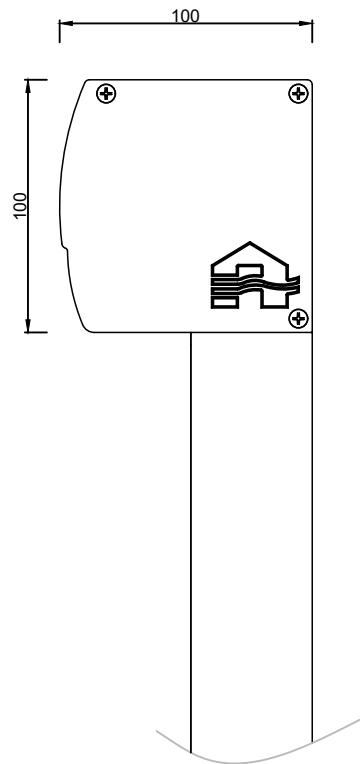


Doorsnede
Section
Cross section
Section
Sección

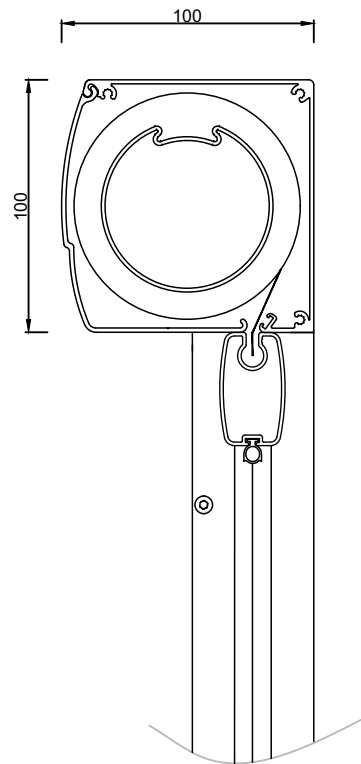

Bovenaanzicht
Vue de dessus
Top view
Obenansicht
Vista desde arriba


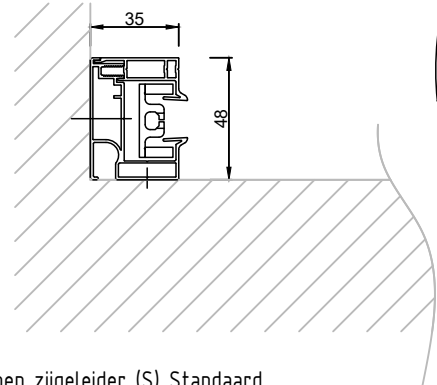


Open zijgeleider (S) Standaard
Coulisse ouvert (S) Standard
Open side channel (S) Standard
Seitenführung offen (S) Standard
Guía lateral abierta (S) Estándar

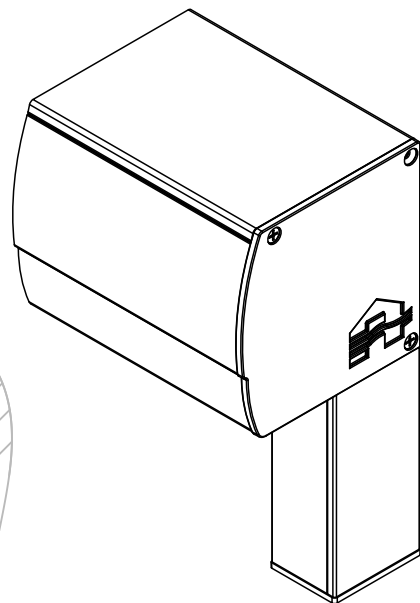


3D aanzicht
Vue en 3D
3D-View
3D-Ansicht
Vista 3D


Afgewerkte hoogte
Hauteur finie
Finished height
Fertige Höhe
Altura acbada

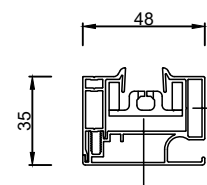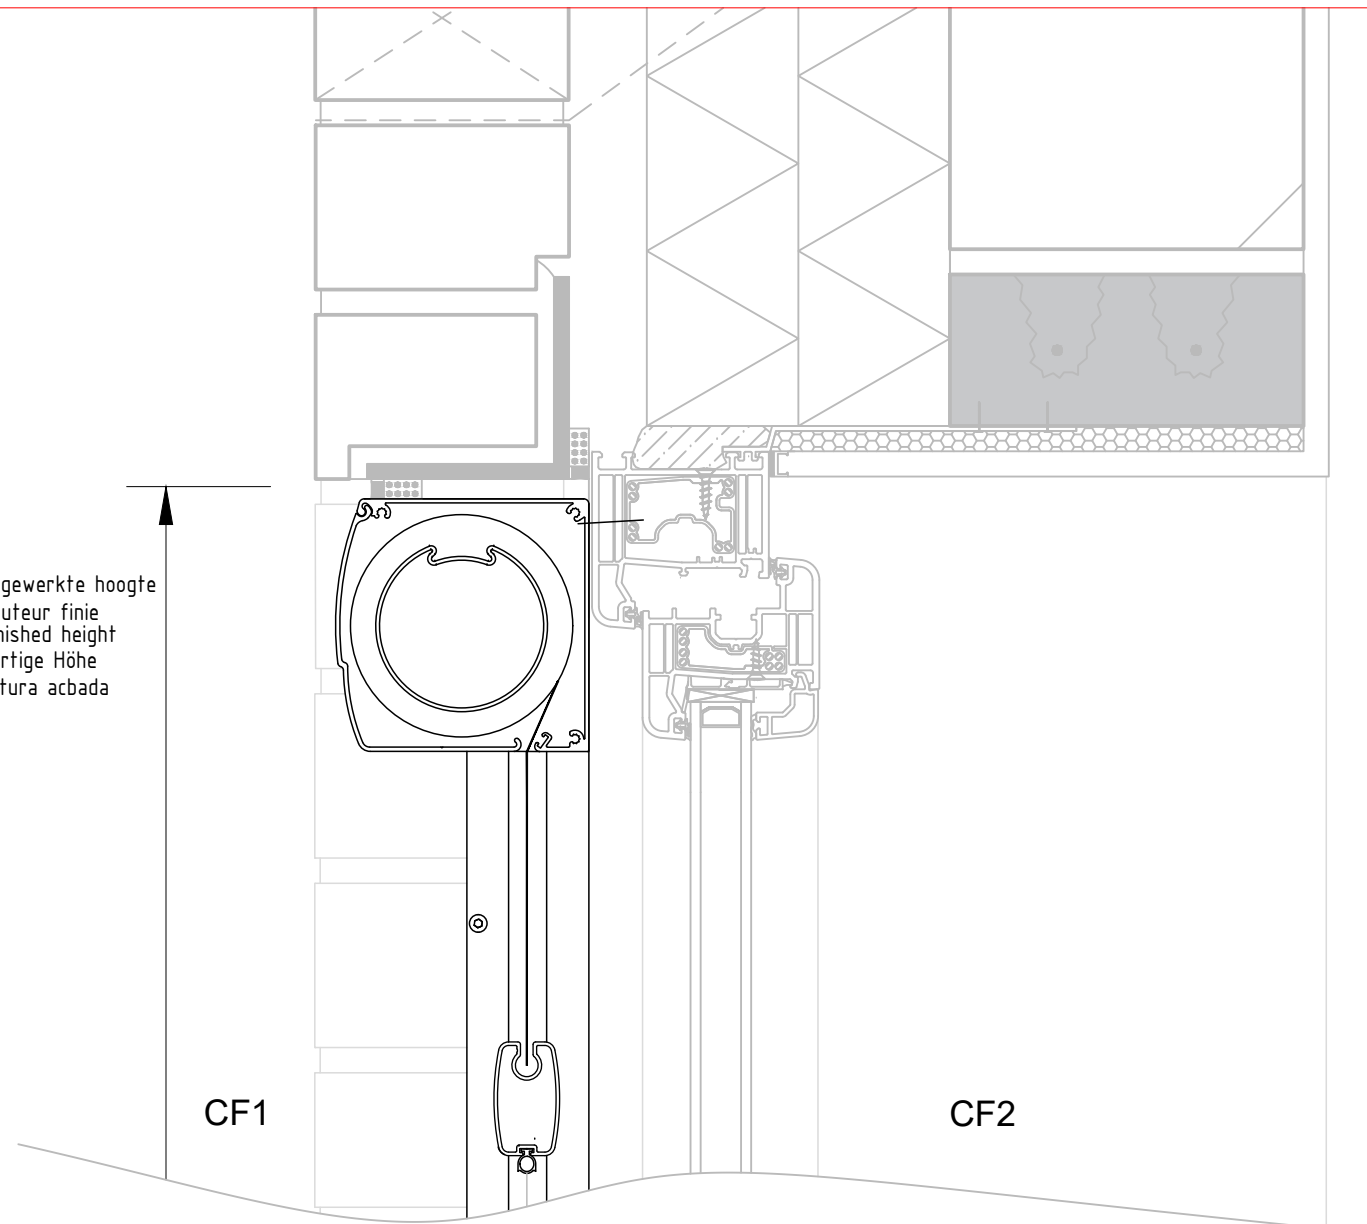


Open zijgeleider (S) Standaard
Coulisse ouvert (S) Standard
Open side channel (S) Standard
Seitenführung offen (S) Standard
Guía lateral abierta (S) Estándar

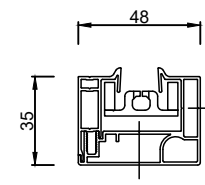

Gesloten zijgeleider (G)
Coulisse fermée (G)
Closed side channel (G)
Seitenführung geschlossen (G)
Guía cerrada (G)

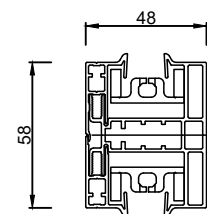

Koppel zijgeleider (K)
Coulisse d'accouplement (K)
Coupling side channel (K)
Koppel-Führung (K)
Guía lateral de acoplamiento (K)

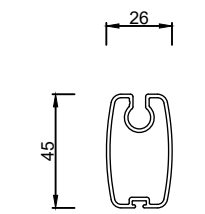

Onderlat softline
Barre de charge softline
Bottom rail softline
Die Endschiene softline
Perfil contrapeso softline

Montagesituatie 1 - voorbouw voor het raam buiten
Montage 1 - avant-corps: devant le châssis à l'extérieur
Installation method 1 - surface-mounted: outside, in front of the window
Einbauweise 1 - vorbau: draussen vor dem rahmen
Tipo de montaje 1 - montaje delante de la ventana en el exterior



RENSON®
Creating healthy spaces

Industriezone "Flanders field"
8790 Waregem (Belgium)
Tel. 056/62.71.11 Fax. 056/60.28.51

Drawn By
jmaer

Date
07/05/2020

Scale
1/3

Fixscreen® 100 Softline

Version
1

Formaat
A3

MS1/M1/EW1/IM1/TdM1

Page
1/1

