

FIXSCREEN® XL

INSTALLATION INSTRUCTIONS

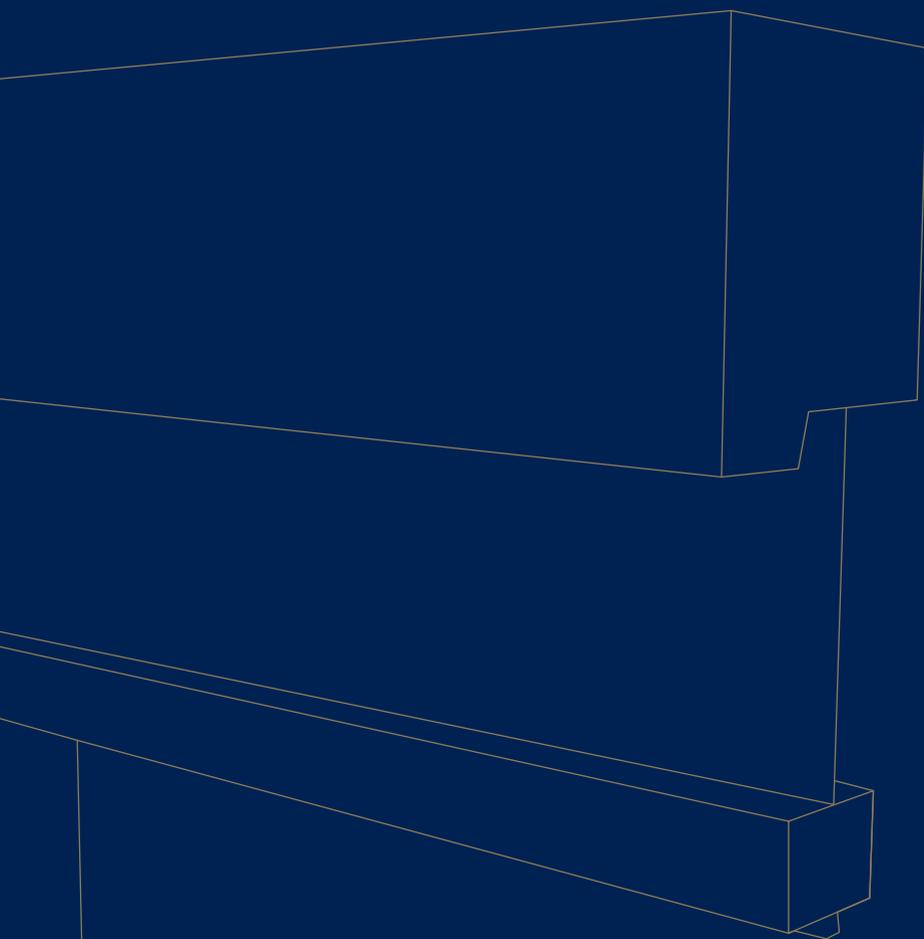


Table of contents


1 • Prepare installation site	3
2 • Unpack & check everything	4
3 • Prepare & mount the headbox	5
4 • Prepare side guides	7
5 • Place tube packet in side consoles	8
6 • Prepare the fabric	10
7 • Assemble bottom bar	12
8 • Assemble the side guides	13
9 • Mounting headbox profiles	14

1 • Prepare installation site

! SAFETY

Ensure adequate compliance with safety regulations during work on site:

- use hydraulic platforms or aerial work platforms instead of ladders
- clearly mark off the area under/around the installation site
- wear suitable safety clothing and safety shoes

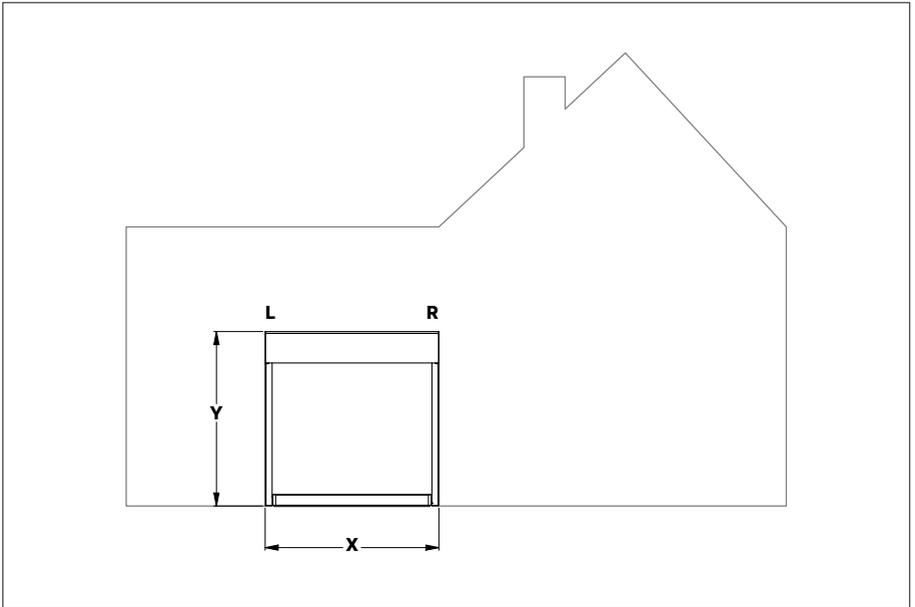


Before installation, double check overall dimensions. During each step of the installation, check if the parts are level. A leveling laser is recommended to aid in the process.

💡 TIP


Use of lift or aid advised if with only 2 men.

2 • Unpack & check everything


Headbox (3 profiles)

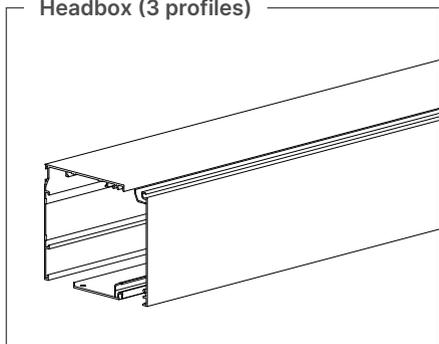


Fabric tube

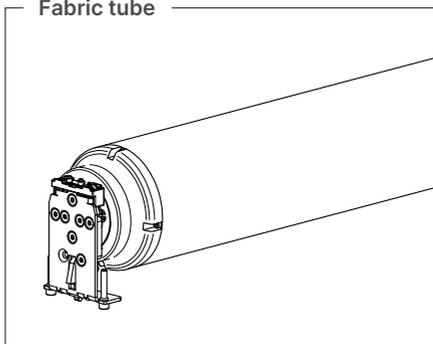


Bottom bar

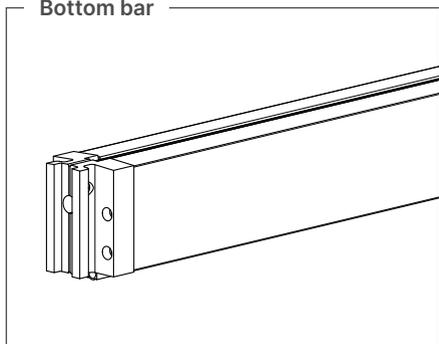


Side guides

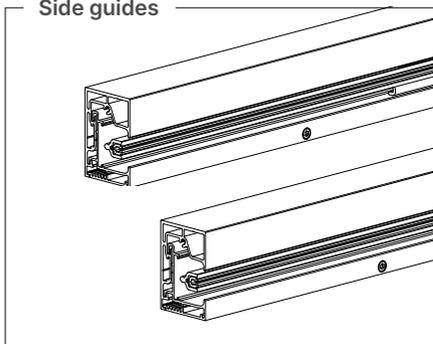


Hardware, brackets, covers

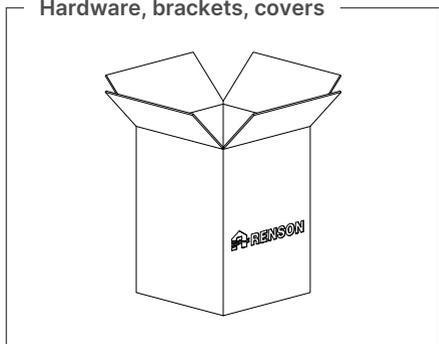


Fabric

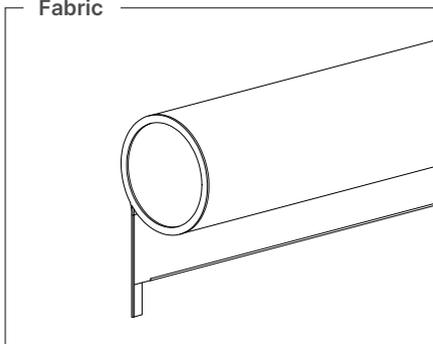


3 • Prepare & mount the headbox

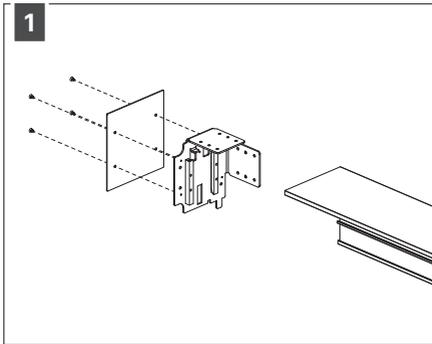


Mount the cover plates on the brackets, use the set screws for fixation.

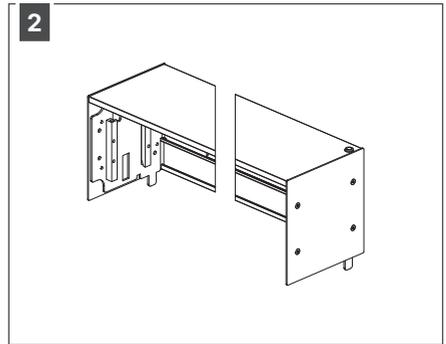

Mount the brackets on the headbox base profile.

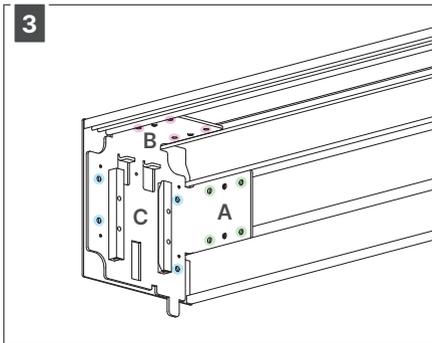

Secure the headbox brackets to the structure behind it.

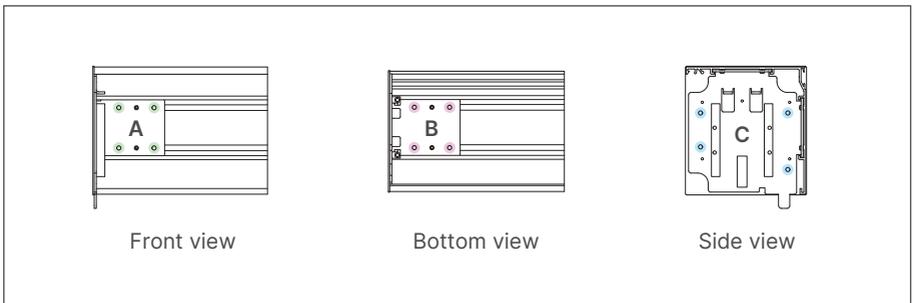

Front view


Bottom view

Side view

Secure the holes A and/or B and/or C.




Secure the base headbox profile in the center to the structure behind it.

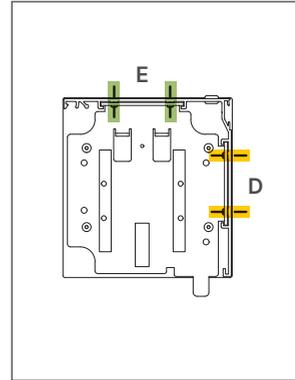

Secure on positions D and/or E.


In case of optional hook profiles:

Hang the headbox profile to the optional hook profiles. The hook profile has a length of 300 mm and can be attached to the underlying structure.

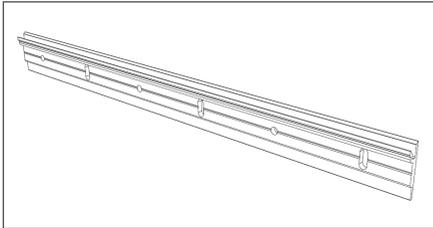


If you choose the hook profile, three hook profiles are provided as standard.

- 1 to counteract the deflection of the box profile in the middle.
- 2 for positioning on the sides of the box.

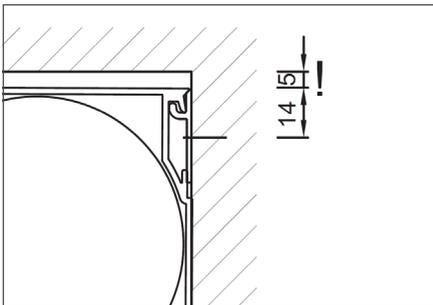


Position the hook profile so that there is enough space for the box to be hooked up.

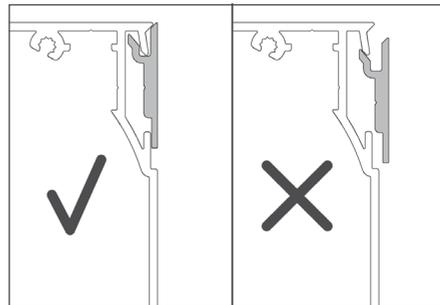


Make sure that the box correctly hooks into the hook profile when you hang it inside.

4 • Prepare side guides

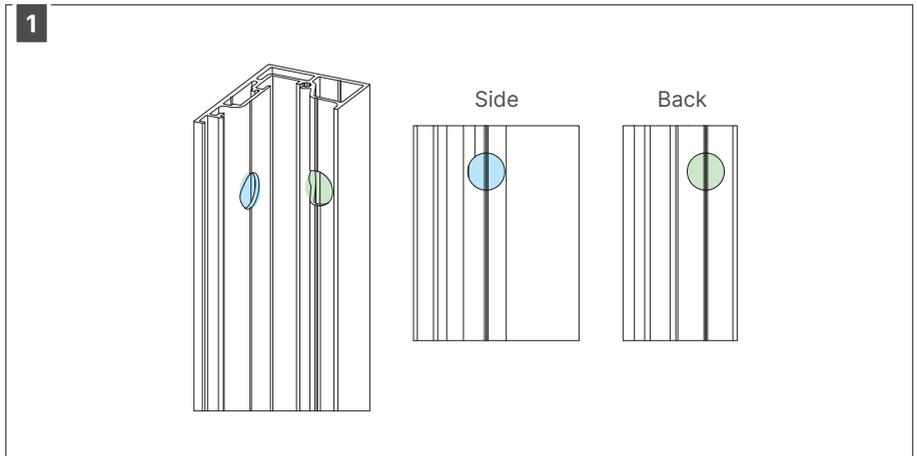

Drill holes for side (IM 7) or back (IM 1).

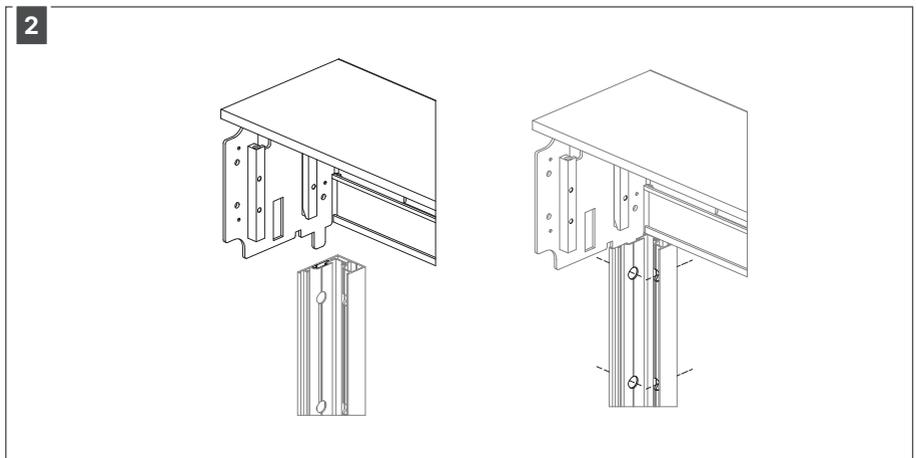


Mount the side guides, secure every 250 mm in the back and/or in the side.


! ATTENTION

For freestanding securing the side is essential to guarantee wind resistance.



5 • Place tube packet in side consoles

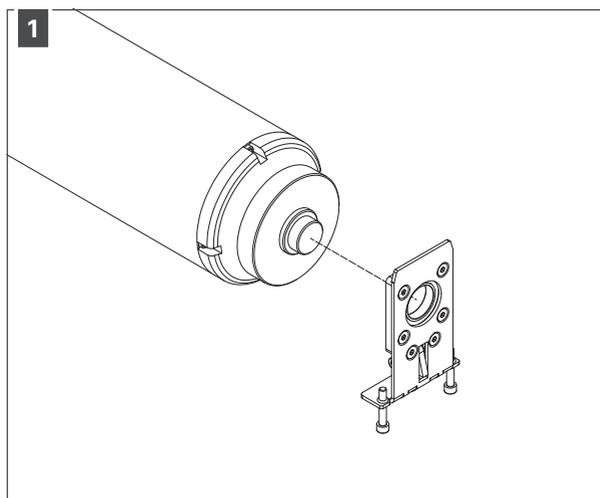



Add the insert plate non motor side.

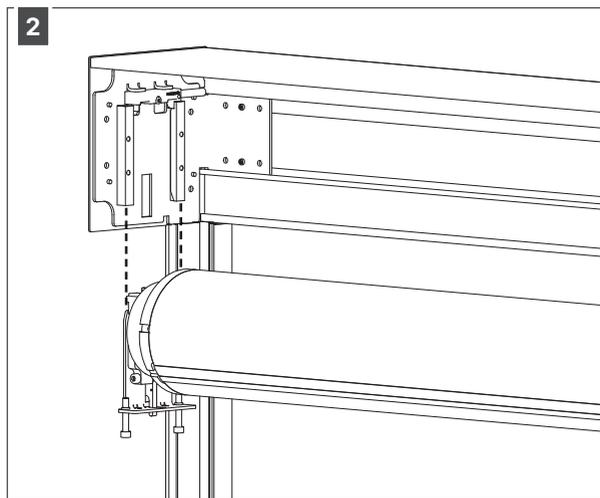

Fixate the tube packet into the console.

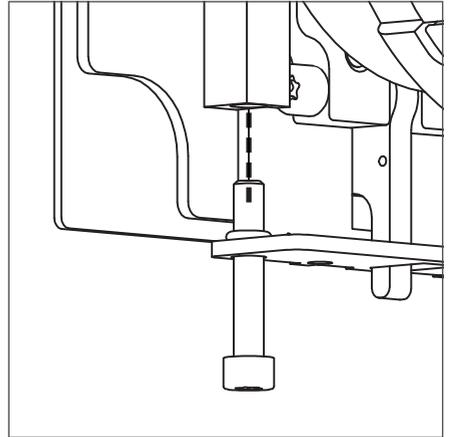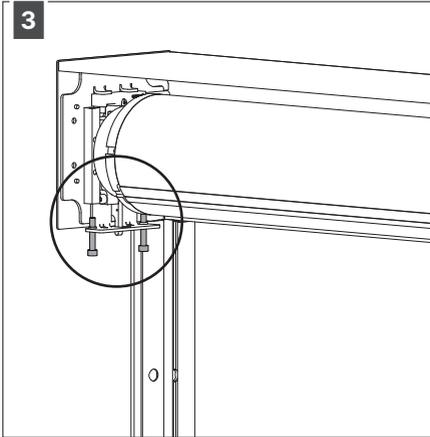

Click & safe holds the tube packet in place once guided into the side consoles.
Fixate the tube packet with the bolts mounted onto the tube packet brace.

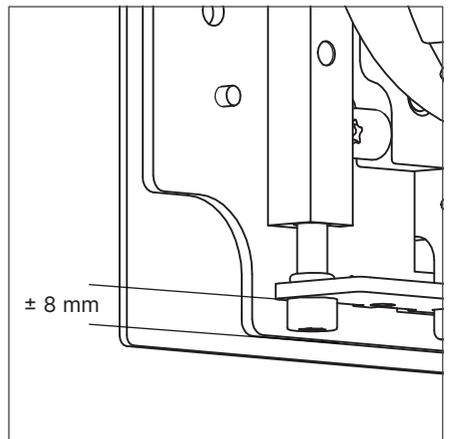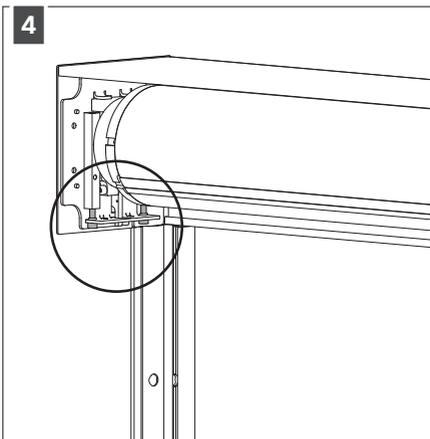


The Connect & Go connects the motor with outside cabling.

Check end position brackets.


i NOTE

Correct fixation and distance of the brackets are important to guarantee a good placement of the tube packet within the headbox. Overtightening can damage the Connect&Go.


6 • Prepare the fabric

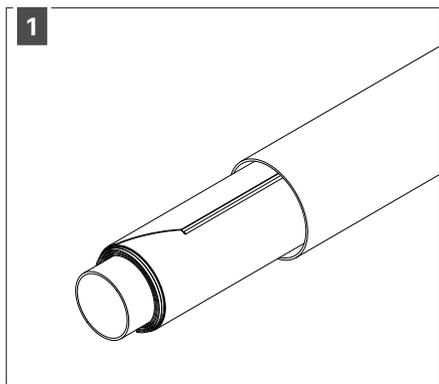


Take the fabric out of packaging, take care not to damage the fabric.

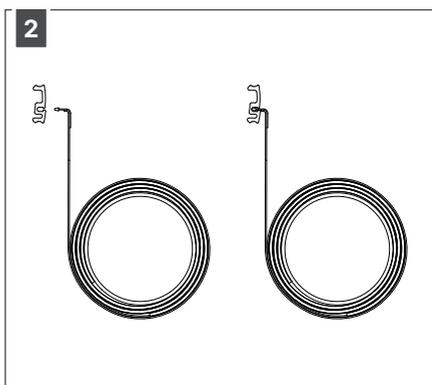


Slide the insert profile over the fabric zipper, ensure the correct side view.

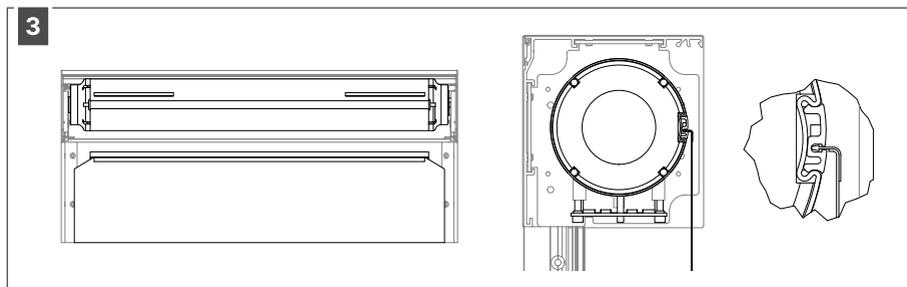


Mount the insert profile with fabric on to the tube. Use a rubber hammer to secure the insert.

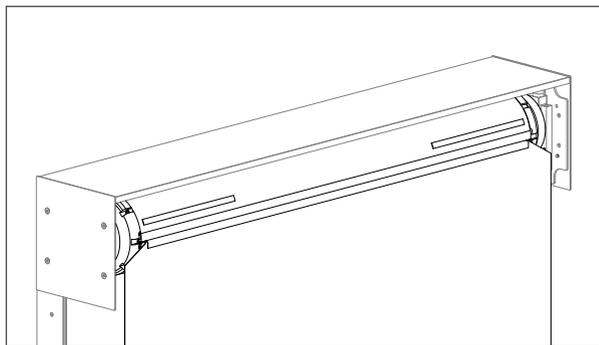


The insert profile and fabric should be firmly fixed in the tube.

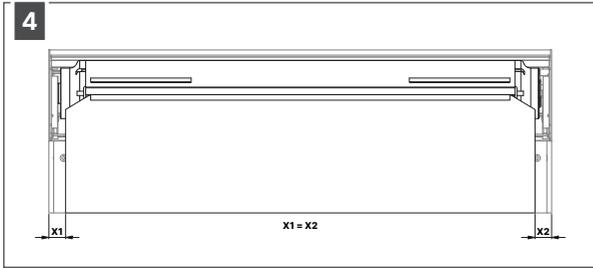

Measure the screen so it's centered.

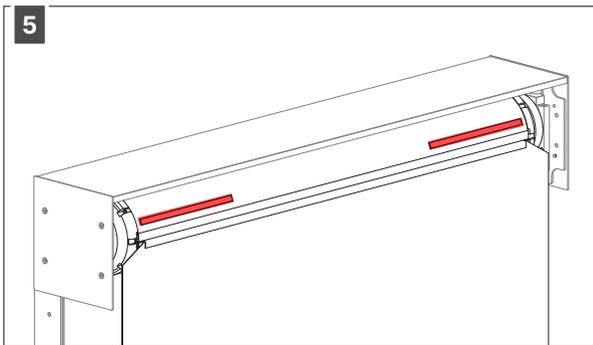


Remove adhesive strips on the tube.

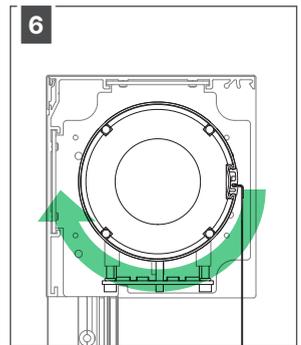


Roll the screen in controlled fashion with the screen towards the back.

7 • Assemble bottom bar


Position the screen halfway for easy access.

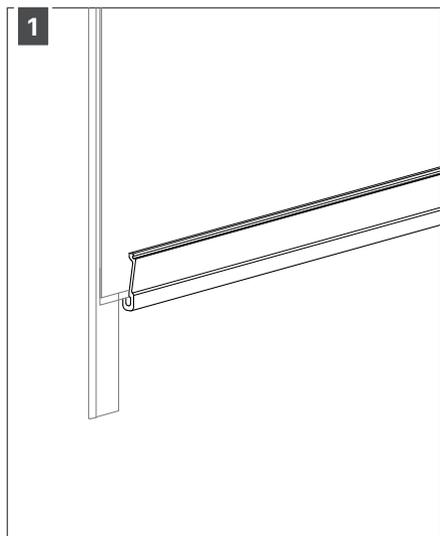


1
Glide the bottom bar clips on to the bottom fabric zipper.

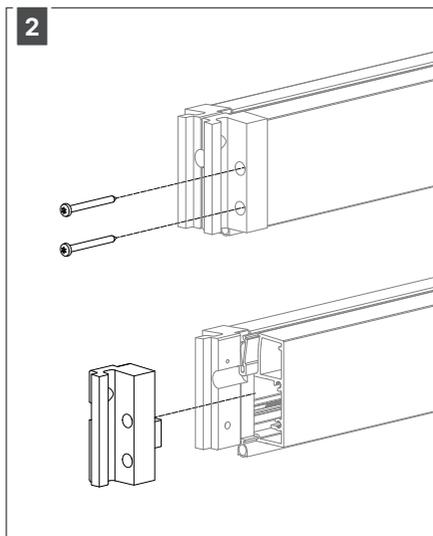

2
Demount the front of the bottom bar end caps.

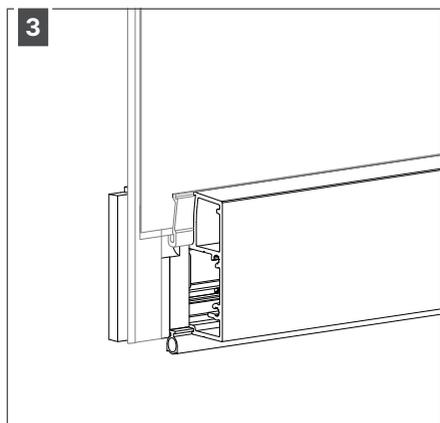


3
Click the bottom bar on to the fabric.

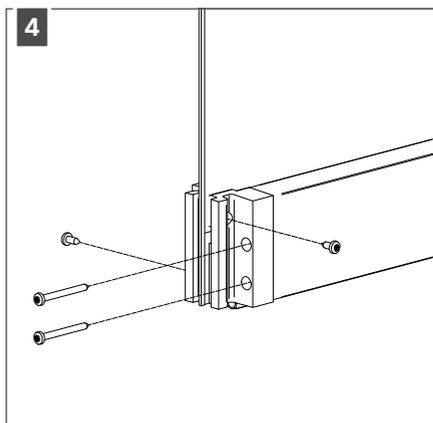


4
Mount the end caps again.
Position the fabric strip inbetween the bottom bar caps. Mount the end caps again.

8 • Assemble the side guides


Position the screen high up for easy mounting.

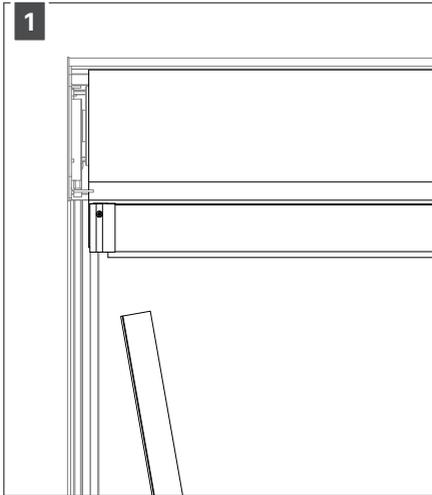


1 Move the front side guide profile to the fabric end.

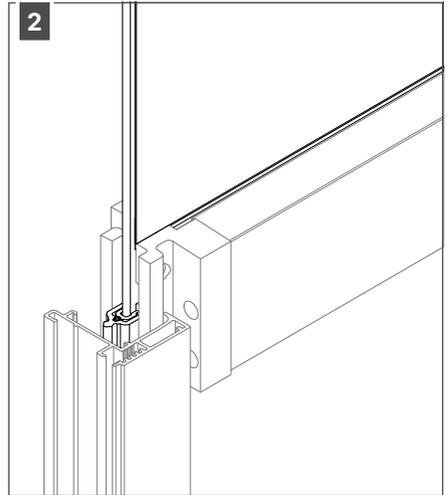

2 Mount side guide over fabric.

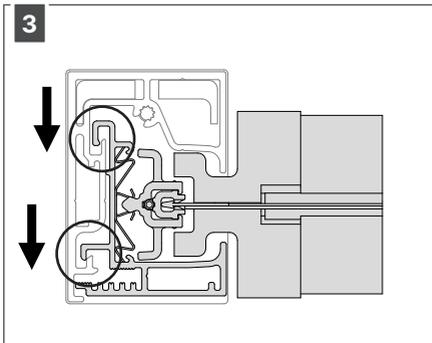


3 Click side guide in each other.

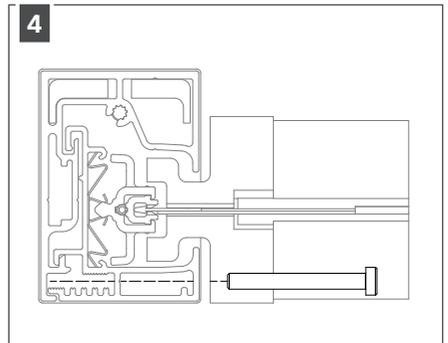


4 Place screws.

9 • Mounting headbox profiles

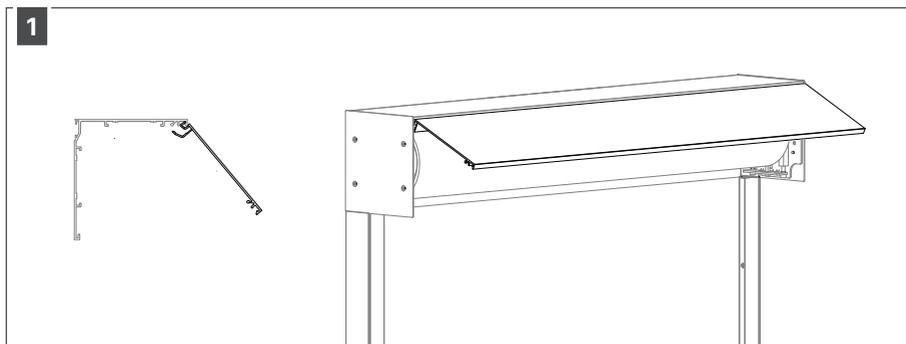


Mount the front profile.

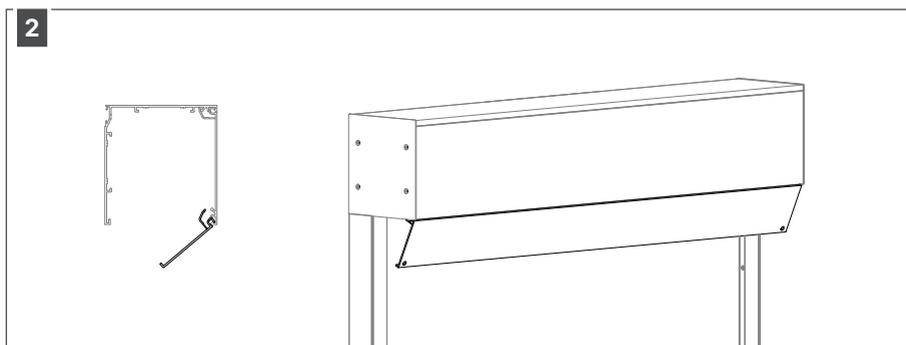


Mount the cover profile.

i NOTE

Mounting the front and cover profile on one another first creates extra stiffness which helps to mount the front cover on the base headbox profile.

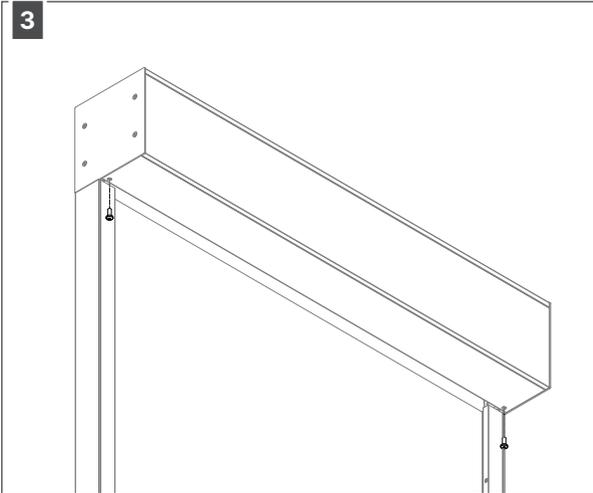

Finish with 2 screws.

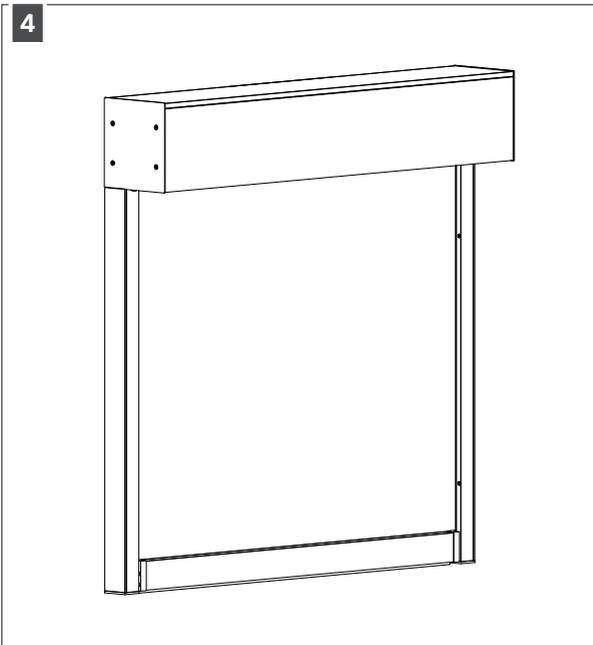

Finished product.

All photos shown are for illustrative purposes; the actual product may vary due to product placement.
Renson® reserves the right to make technical changes to the products described in this brochure.
The most recent product information, availability, and your local distributor can always be found on www.renson.eu



* L X X X X X X X *

